









Catalog 2024






F

FOURTEC



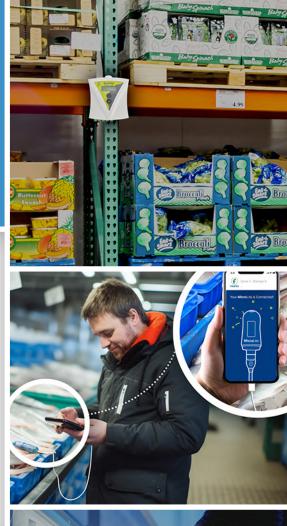







About Fourtec

Fourtec is a leading developer of data logging systems, offering a variety of solutions including the new Bluetooth Low Energy data logger, for Temperature and Humidity monitoring.

For over 30 years, Fourtec has provided high-quality, simple to operate, and value for money solutions that cater a wide range of applications-

From electronic, semiconductors and industrial manufacturers to pharmaceutical manufacturing sites, pharmacies, hospitals and laboratories, food manufacturers and food processing companies, warehousing, transportation, logistics and many more. Our most fast moving and requested products can be found at the world's leading companies, research centers, and universities as well as in many other industries and companies.



BluLite BLE Temp & RH Data Logge

Value for money, simple to operate and reliable solutions

All products can be implemented in multiple market segmnet

Products development in accordance with FDA regulations and standards

In-house software development for a unique data collection and analysis app / dashboard

Why Us?

> 30 years of experience and thousands of global users and loyal customers

Professional Customer Support team



Our solutions

for the cold chain and manufacturing process



555 Food Manufacturing



Ĥ Universities & Research Centers



Catering, Ready Meal Kits, Services & Hospitality



Pharmaceutical Manufacturing Sites

G



Industrial Applications



N/

Agriculture & Aquaculture Pre & Post Harvest



IH

Hospital Environments



Pharmacies

聖



Laboratories

1



Wholesale & Retail



Export, In-land & Last Mile Delivery Transportation



Warehouse & Museums





Some of Our End Customers

Pharmaceutical, Medical Centers & Universties



Food and Food Processing



Industry, Government and State Agencies





Product Line



MicroLite Family

Wide range of accurate, portable, multi-trip cablefree Temperature and Humidity USB loggers for electronic, semiconductors and industrial manufacturers, pharmaceuticals manufacturing sites, laboratories, food and food processing, cold rooms, communication rooms and shipment.

Compatible with FourtecLite App for Android devices



MicroLogPRO Family

A multi- functional Temperature and Humidity data logger for various pharmaceutical, industrial and supply chain applications, storage, cold rooms, computers and communication rooms.

Compatible with FourtecLite App for Android devices



DataNet Family

Multi-point, online, wireless Temperature and Humidity monitoring system with easy deployment for stationary environments, hospitals environments, museums, production floors, pharma industry, and warehouses.



SingleRide

Single -trip low cost PDF logger. Small, light, waterproof, and packed in a food safe wrapper, for monitoring Temperature in in-land and last mile delivery and transportation.



PicoLite

Limited-use Temperature logger for the cold chain processes, long range tranportaion and last mile delivery.



Dry Ice Logger

Dry ice Temperature USB logger for pharmaceuticals (vaccine and drugs storage and shipment), refrigerators, laboratories, and cold rooms.



BluLite

A Bluetooth Low Energy Temperature and Humidity data logger, suitable for the cold chain and supply chain monitoring process: pharmacies, laboratories, storage and transportation.

Compatible with FourtecLite App for Android devices





MicroLite

Portable cable free USB loggers

Measurement Temperature range: -40°C to 80°C (-40°F to 176°F) Humidity range: 5% to 95% Available also with external needle/round temperature probe allowing wide measurement range of -50°C to 150°C (-58°F to 302°F)

- Up to 32K samples memory capacity
- O Direct USB interface
- O Free license to use for the DataSuite software and FourtecLite Android app
- O Boomerang feature for automatic data abnormalities PDF report
- O LED for alarm and sampling indication

- LCD battery display
- O Replaceable battery
- O Magnet key for stand-alone logger activation
- O Dust and water resistant IP67/IP54 (depending on logger model)
- O Cradle for wall mounting



MicroLite III Temperature



MicroLite III Temperature & RH

ıŴ



MicroLite III NTC









Meal Kits, Services

Post Harvesting

Research Centers

Applications



Compatible with the DataSuite software for





MicroLogPRO

Environmental monitoring

Measurement Temperature range: -40° to 80 °C (-40°F to 176°F) Humidity range: 5% to 95% Available with external input for NTC Temperature sensor -50°C to 150 °C (-58°F to 302°F)

- O Up to 52k samples memory capacity
- O Mini-USB port for PC communication and firmware updates
- O Free license for the DataSuite software and FourtecLite Android app
- O Boomerang feature for automatic PDF data report

- O Multi-function keypad for manual time stamp, run/stop activation
- O Built-in LED for logging and alarm indication
- 4-digit data display
- O LCD battery display, replacable battery
- O Water and dust-resistant IP54/NEMA 4



MicroLogPRO III Temperature



1



Avaliable with external NTC probe

Solutions





















Post Harvesting

Export, In-land &



Compatible with the





DataNet

Multi-point online wireless data monitoring netwrok

Measurement operation range: -20°C to 50°C (-4°F to 122°F) temperature range and 5% to 95% humidity range Additional PT100 sensors allow measuring within the range from -200°C to 400 °C (-328°F to 752°F) Additional various thermocouple types allow measuring within the range from -200°C to 1000 °C (-328°F to 1832°F) Voltage and current inputs to be used with vast variety of sensors by other producers

- Wireless infrastructure suitable for multiple industrial and storge applications
- Multiple network management from single workstation or via LAN for long range monitoring
- Real-time monitoring system with ZigBee wireless technology
- Robust network with auto-rerouting, data recovery, and long-range transmission
- O Boomerang feature for automatic PDF data report

- RF loggers measuring temperature, voltage, current, pulse, frequency, and dry contact
- O Operates on 2.4 GHz RF frequency
- O Units can also serve as a transmission repeater
- Low power consumption for long battery life of the logger
- System alarm notifications via SMS, email, and external siren













Warehouse





Industrial Applications V

Wholesale & Retail

Food Manufacturing Hospita Environme


Pha Manu

maceutical acturing sites



SingleRide

Single-trip low cost Temperature PDF logger

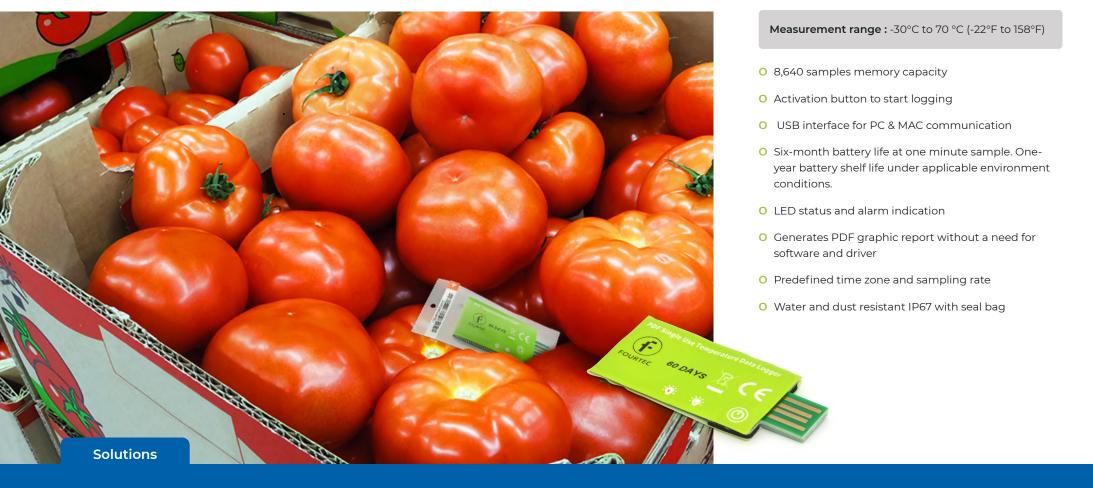







Agriculture & Aquaculture Meal Kits, Services

Export, In-land & Last



PicoLite

Limited trips Temperature logger



Compatible with the DataSuite software for desktop and FourtecLite app for Android devices



Measurement range : -40C° to 80°C (-40°F to 176°F)

- O Up to 16k samples memory capacity
- O Direct USB interface for PC communication
- Free license to use for the DataSuite software and FourtecLite data
- O Boomerang for automatic PDF data report
- Activation button to start logging and marking time stamps
- Built-in bi-color LED for logging and immediate alarm indication
- O 6-month battery life (at one minute sampling)
- O Water and dust resistant IP67







Catering, Ready Meal Kits, Services

Agriculture & Aquacult Pre & Post Har<u>vest</u>


Aquaculture



Whole

ale & Retail Exp -

Export, In-land & Last Mile Delivery Transportation





Dry Ice Logger

Extra-low Temperature PDF data logger

Measurement range: -80°C to 70 °C (-112°F to 158°F)

- 0 17,280 samples memory capacity
- Replaceable battery
- O Activation button to start logging
- O USB interface for PC & MAC communication
- O Built-in LED for logging and alarm indication
- O User defined Alarm Levels, Sample Rate, and Time Zone settings
- O Water and dust resistant IP67





Solutions



-







罍





BluLite

A Bluetooth Temperature & Humidity data logger



Compatible with the DataSuite software for desktop and FourtecLite app for Android devices

Measurement temperature range: -20°C to 60°C (-4°F to 140°F) Humidity range: 0% to 90%

- O Up to 32K samples memory capacity
- O Bluetooth Low Energy (5.0) connectivity
- O LCD alarm indication will key parameters information
- Free license to use for the DataSuite software and FourtecLite data
- O Boomerang feature for automatic PDF data report
- O Replaceable battery
- O Water and dust resistant IP54

Solutions











BluLite BLE Temp & RH Data Logger













Food Manufacturing Catering, Ready Meal Kits, Services

Agriculture & Aquaculture Pre & Post Harvesting

naceutical Ph cturing sites


Laboratorie

Warehouse & Museum

Industrial pplications

lesale & Retail

Export, In-land & Last Mile Delivery Transportation





Software Solutions


DataSuite

Feature-rich, intuitive, data analysis software

Features:



Manage up to 14 loggers simultaneously



Logger setup and

calibration-perform

calibration, update

the logger, define

sampling rate, etc.

firmware, name



Lifetime data track of all the loggers' measurements


Boomerang Reportsends automatic emails to pre-defined recipients with a report of the data loggers' recorded data (temperature and humidity) and abnormalities report


Ш	

Friendly and intuitive interface for data monitoring and anlysis



Timer run - Start data recording at a predetermined time, as set by the user or system schedule

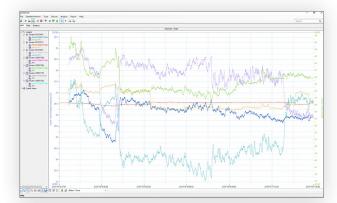

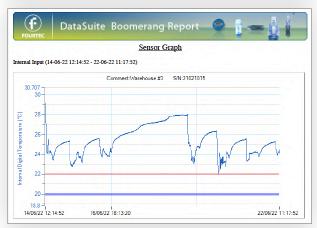

DataSuit File Tool	Is DataNet Network		Help				
iii 🗧 🕯	u 🕼 🦂 🔘 🔍	o 🕫 👔 🔽 🖛 🖳 🛛				Search	C,
Sreph Tabl	e Statistics						
			þataS	uite - Table			
index	Date and Time	Internal Digital Temperature 21021015 Warehouse #3	Internal RH 21021015 Warehouse #3	Internal NTC (MLII) 20042099 CleanRoom #1	PicoLite II Temperature 20101292 Warehouse #2		
▶ 25	16-05-22 15:57:00	25.04°C	48.48%	27.46°C	25.50°C		
26	16-05-22 15:58:00	25.08°C	49.11%	27.50°C	25.50°C		
27	16-05-22 15:59:00	25.15°C	49.36%	27.55°C	25.50°C		
28	16-05-22 16:00:00	25.16°C	49.32%	27.58°C	25.50°C		
29	16-05-22 16:01:00	25.21°C	49.49%	27.63°C	25.50°C		
30	16-05-22 16:02:00	25.22°C	49.75%	27.66°C	25.50°C		
31	16-05-22 16:03:00	25.24°C	49.72%	27.69°C	25.50°C		
32	16-05-22 16:04:00	25.34°C	49.71%	27.74°C	25.50°C		
33	16-05-22 16:05:00	25.37°C	49.74%	27.75°C	25.50°C		
34	16-05-22 16:06:00	25.35°C	49.91%	27.77°C	25.50°C		
35	16-05-22 16:07:00	25.41°C	49.59%	27.81°C	25.50°C		
36	16-05-22 16:08:00	25.44°C	49.39%	27.86°C	25.50°C		
37	16-05-22 16:09:00	25.48°C	49.42%	27.89°C	25.50°C		
38	16-05-22 16:10:00	25.51°C	49.42%	27.92°C	25.50°C		
39	16-05-22 16:11:00	25.58°C	49.22%	27.96°C	25.50°C		
40	16-05-22 16:12:00	25.60°C	49.16%	27.99°C	25.50°C		
41	16-05-22 16:13:00	25.61°C	49.26%	28.05°C	26.00°C		
42	16-05-22 16:14:00	25.64°C	49.18%	28.10°C	26.00°C		
43	16-05-22 16:15:00	25.68°C	48.96%	28.10°C	26.00°C		
44	16-05-22 16:16:00	25.71°C	48.90%	28.13°C	26.00°C		
45	16-05-22 16:17:00	25.77°C	48.64%	28.16°C	26.00°C		
46	16-05-22 16:18:00	25.79°C	48.65%	28.21°C	26.00°C		
47	16-05-22 16:19:00	25.80°C	48.54%	28.24°C	26.00°C		
48	16-05-22 16:20:00	25.86°C	48.39%	28.28°C	26.00°C		
49	16-05-22 16:21:00	25.90°C	48.39%	28.33°C	26.00°C		

Time Stamps- Analyze specific events in time that were marked by the user on the logger itself, called Time Stamps.




Developed in accordance to FDA requirments



software updates and upgrades









Cyclic run - A continuous data sampling process where, upon reaching memory capacity, the

system overwrites the

oldest recorded data with new incoming data

Print or export the data to

excel for further analysis or

regulations requirements



Software Solutions

DatPass CFR

Administration Management Software

Facilitated for administration management and creation of different user hierarchies within the software.

- O FDA 21 CFR Part 11 and GAMP 5 compliancy
- O Install on a local PC or network
- O Record all user activity
- O Manages user access to supported systems
- Keeps an audit trail that automatically records any user activity within DatPass, and supported Fourtec software.
- The audit trail shows who has accessed the system and what operations they have performed, marked with a date & time stamp of the activity and tracking of invalid logins to the system

🗃 🥥 🦆 🎒 😂

ID	UserName	DateTime	ActionTypeName	ActionName		ApplicationName	Reason	 Logger S/N 	
570	Admin	8/14/2019 10:29 AM	Device Control	Download		DataSuite		801515	
571	Admin	8/14/2019 11:20 AM	Security	Exiting applicat	ion	DataSuite			
572	Admin	8/14/2019 4:22 PM	Security	Login successf	ul	DataSuite			
582	Admin 🦼	Group Administratio	n	-		DataSuite			
583	Admin	1	DataSuite						
588	Admin	Group Name				DataSuite			
589	Admin	Administrator			DataSuite				
597	Admin	🦓 Approver 🚯 User			DataSuite		910043		
598	Admin	000				DataSuite			
599	Admin				Add Group	DataSuite			
600	Admin				0	DataSuite			
618	Admin Admin Admin			Properties	DataSuite				
619					Remove	DataSuite			
620						DataSuite			
621	Admin	n				DataSuite		9246523	
624	Admin	dmin				DataSuite		18091149	
625	Admin					DataSuite		801515	
626	Admin				DataSuite				
627	Admin	Close			DataSuite				
628	Admin					DataSuite			
630	Admin	8/25/2019 5:36 PM	Security	Login successf	ul	DataSuite			
631	Admin	8/25/2019 6:14 PM	Security	Exiting applicat	ion	DataSuite			
632	Admin	8/26/2019 5:16 PM	Security	Login successf	ul	DataSuite			
634	Admin	8/26/2019 5:21 PM	Application Activity	Modify email ala	am potifications	DataSuite		910043	





Software Solutions

FourtecLite

Android Devices Application

Features:



Easy, convient portable data monitoring solution from everywhere



Boomerang Report- a feature that sends end users an automatic pre-defined report of the data loggers' recorded data (temperature and humidity) and abnormalities report.



Keep your data updated wherever you go on your logger, PC and android device


Send email notifications of



logger

Present and

Define and customize your logger from everywhere

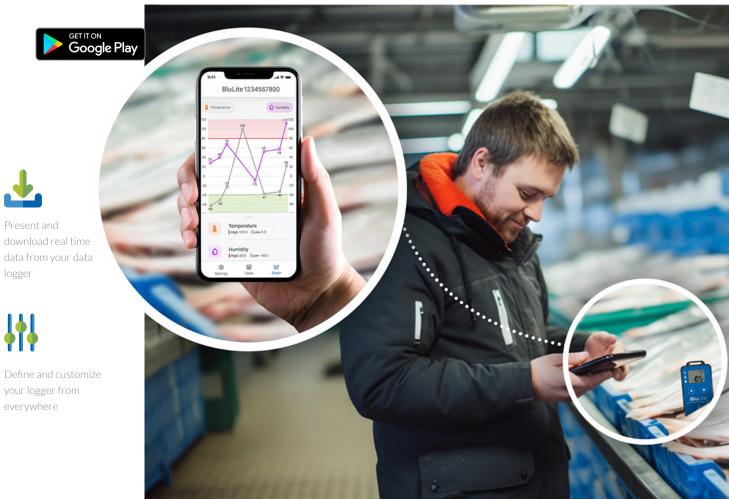

The app supports the following devices:



MicroLite III Temperature

MicroLite III Temperature & RH



MicroLite III NTC



MicroLogPro III Temperature





MicroLogPro III Temperature & RH

€ • •0.51

BluLite

NEL



Quality Assurance & Regulatory Compliance

At Fourtec, we acknowledge that in order to succeed in a competitive arena, we must provide reliable and efficient customer service, and ensure that all products produced by the company are of the highest quality. For this purpose, we have established a Quality Management System that meets the requirements of ISO 9001 and ISO 14001

- Our Quality Management System is designed to ensure customer satisfaction, maintaining company efficiency and productivity.
- We are committed to take all necessary measures to ensure a continuous and lasting process of enhancements in the products and services supplied to our customers.
- Highly professional Customer Support, monitored by a service call management system that analyzes all calls.

Fourtec products are also compliant with the following regulations-



HACCP Validation

Hazard analysis and critical control points systematic preventive approach to food safety and biological, chemical, and physical hazards in production processes.



EN 12830

Tests the performance and suitability of temperature recorders for the transport, storage, and distribution of chilled, frozen, deepfrozen/quick-frozen food and ice cream.



ISI

ISO Certification Management system standards: ISO 9001: 2015 and ISO 14001: 2015.





FDA

The USA FDA Food Safety Modernization Act (FSMA)

The FDA final rule on Requirements for Additional Traceability Records for Certain Foods (Food Traceability Final Rule) establishes traceability recordkeeping requirements for companies who manufacture, process, pack, or hold foods included on the Food Traceability List (FTL).

The requirment is to maintain records containing **Key Data Elements (KDEs)** associated with specific **Critical Tracking Events (CTEs)**; and provide information to the FDA within 24 hours or within some reasonable time to which the FDA has agreed.

The new requirements will enable faster identification and rapid removal of potentially contaminated food from the market, resulting in fewer foodborne illnesses and/or deaths.

Sea Food



Fresh-Cut Romaine



* An example of the supply chain for Seafood and Fresh-cut Romaine

Fourtec's data loggers are managed by the DataSuite software and FourtecLite Android app that offer feature-rich and intuitive data analysis and management solutions for central and digital monitoring of temperature and humidity loggers. By enabling data monitoring, analysis and lifetime data storage, the user can monitor key data points in a way that meets the new FDA regulations.

Sense it manage it & keep it simple . . . FOURTEC www.fourtec.com